


PTB #38

RSW Series Polarization Options Installation Instructions

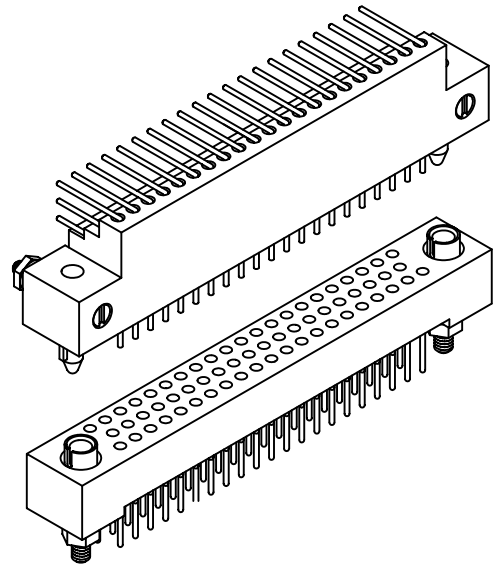

Installation:


Right angle Plug: Hardware is inserted from the mating face of the connector. Insert mounting screw through the hardware. Tighten nuts to a forward torque of 16–24 inch/ounces.

Receptacle: Hardware is inserted from the mating face of the connector. Tighten nuts to a forward torque of 16–24 inch/ounces.

For polarized hardware, use the chart below. The connector should then be marked with the appropriate polarization (if not already marked).

Select the appropriate two-digit number below and include as the last two digits of the part number.



Example shown at right:
Plug RSWR62PR8GMGF6
Receptacle RSWQ62SD14GFGF6

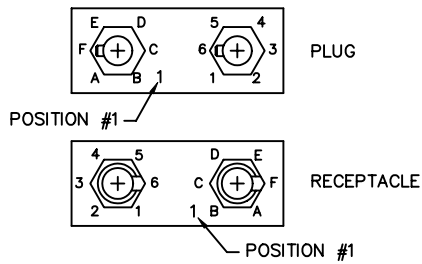

A1	B1	C1	D1	E1	F1
A2	B2	C2	D2	E2	F2
A3	B3	C3	D3	E3	F3
A4	B4	C4	D4	E4	F4
A5	B5	C5	D5	E5	F5
A6	B6	C6	D6	E6	F6

PTB #38

RSW Series
Polarization Options
Installation Instructions

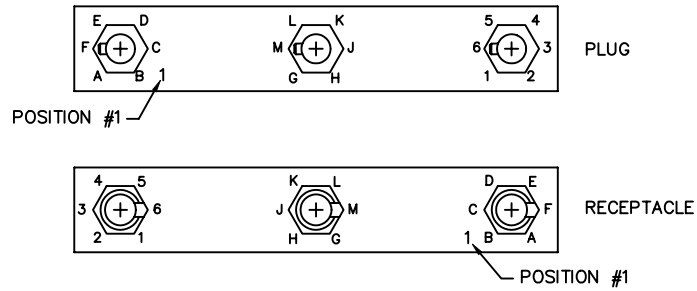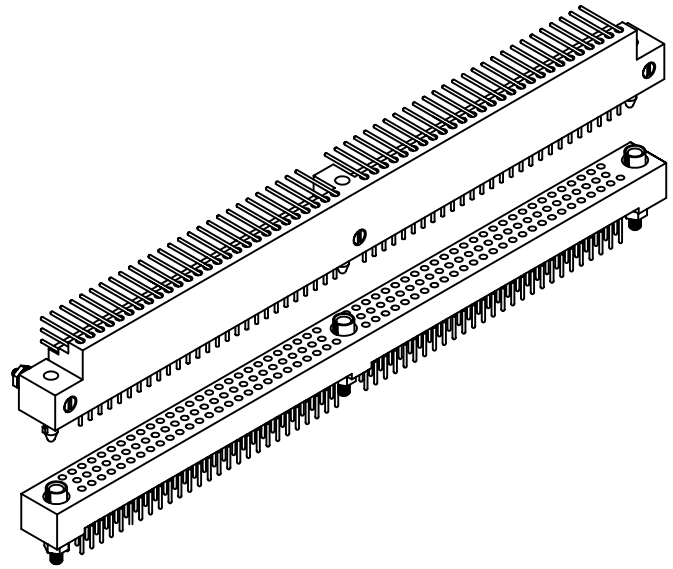

Select the appropriate three-digit number shown above and include as the last three digits of the part number.

Example shown above:
Plug RSWB160PR8GMGM6
Receptacle RSWD160SD14GFGFM6