


37 UNIVERSAL

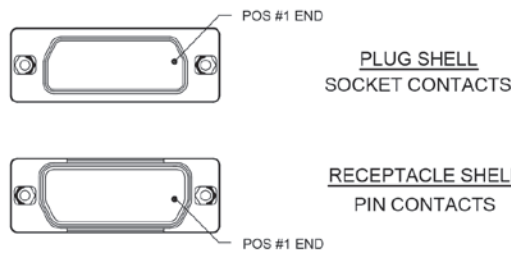

Select the appropriate two digit number above and include as the last two digits of the hardware code in the part number.

Example:
 Plug RK412-050-201-5901
 Receptacle RK442-050-301-2901

Please consult the AirBorn website for the latest revision of this document prior to beginning any design work.